



# STEP 1

## NAIL FLOOR TRAP BODY TO FORM WORK

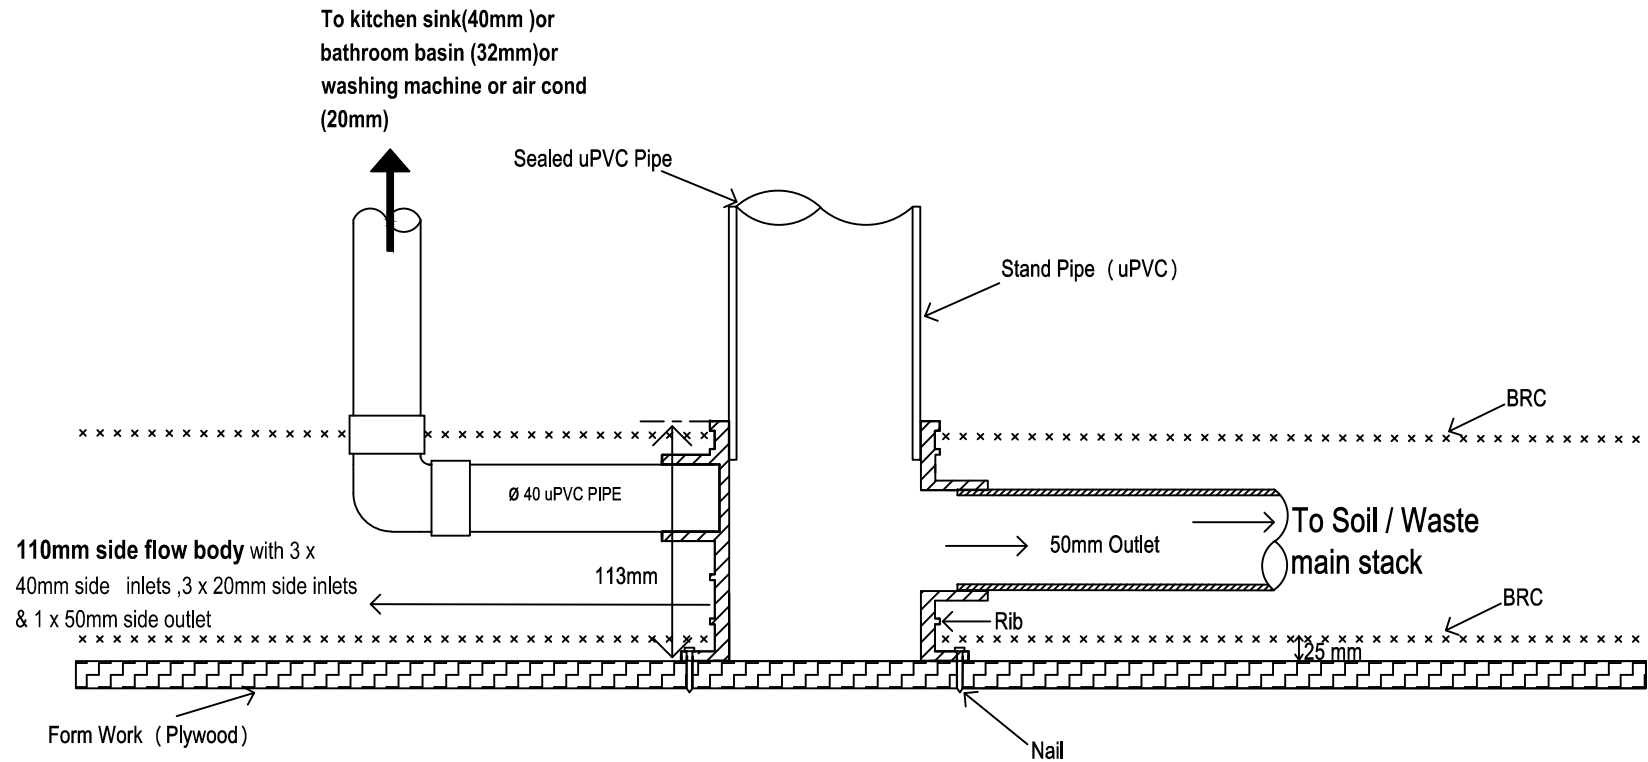

- a) Nail / tie trap body to form work / BRC before pouring concrete.
- b) Make connections to air con pipe, basin, sink, etc ( if any )
- c) Make connections from outlet to main stack.


## STEP 2 FLOOR TRAP BODY IN SLAB AFTER CONCRETE

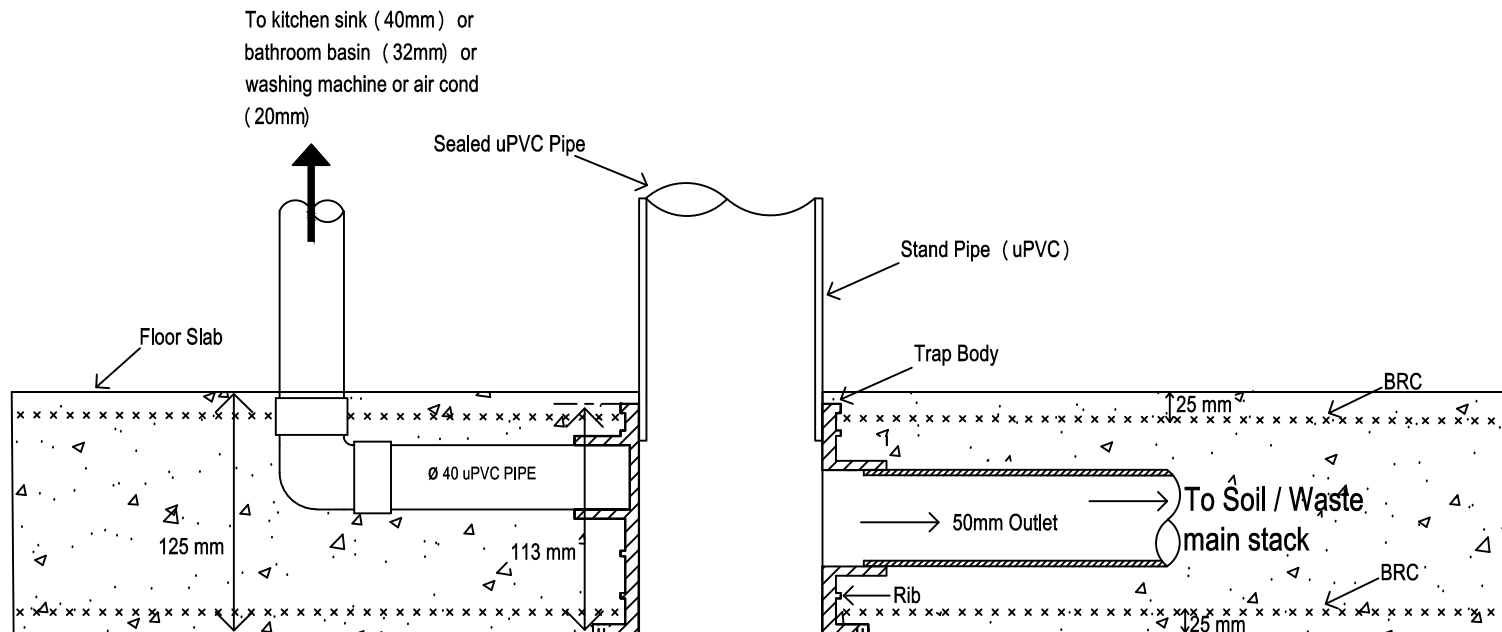

- a) Pour concrete for floor slab to required height.
- b) Wait for concrete to cure / harden.
- c) Remove form work

# STEP 3


## FLOOR TRAP BODY IN SLAB AFTER CONCRETE WITH END CAP

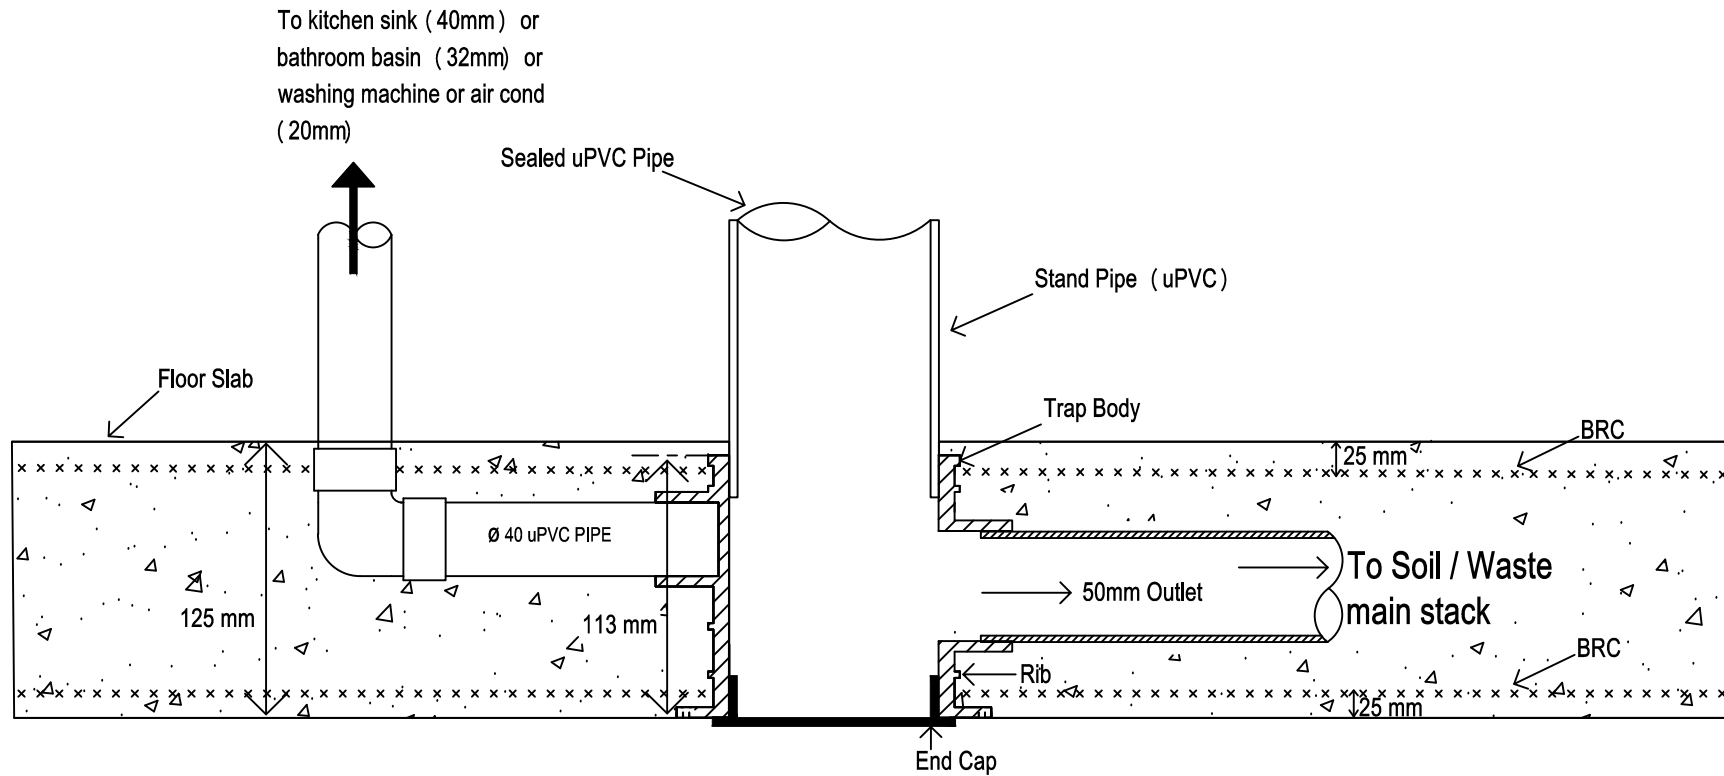

- a) Solvent cement endcap to trap body. Ensure that both bonding surfaces are clean before jointing

# STEP 4


## WATER PROOFING AND CONCRETE SCREETING

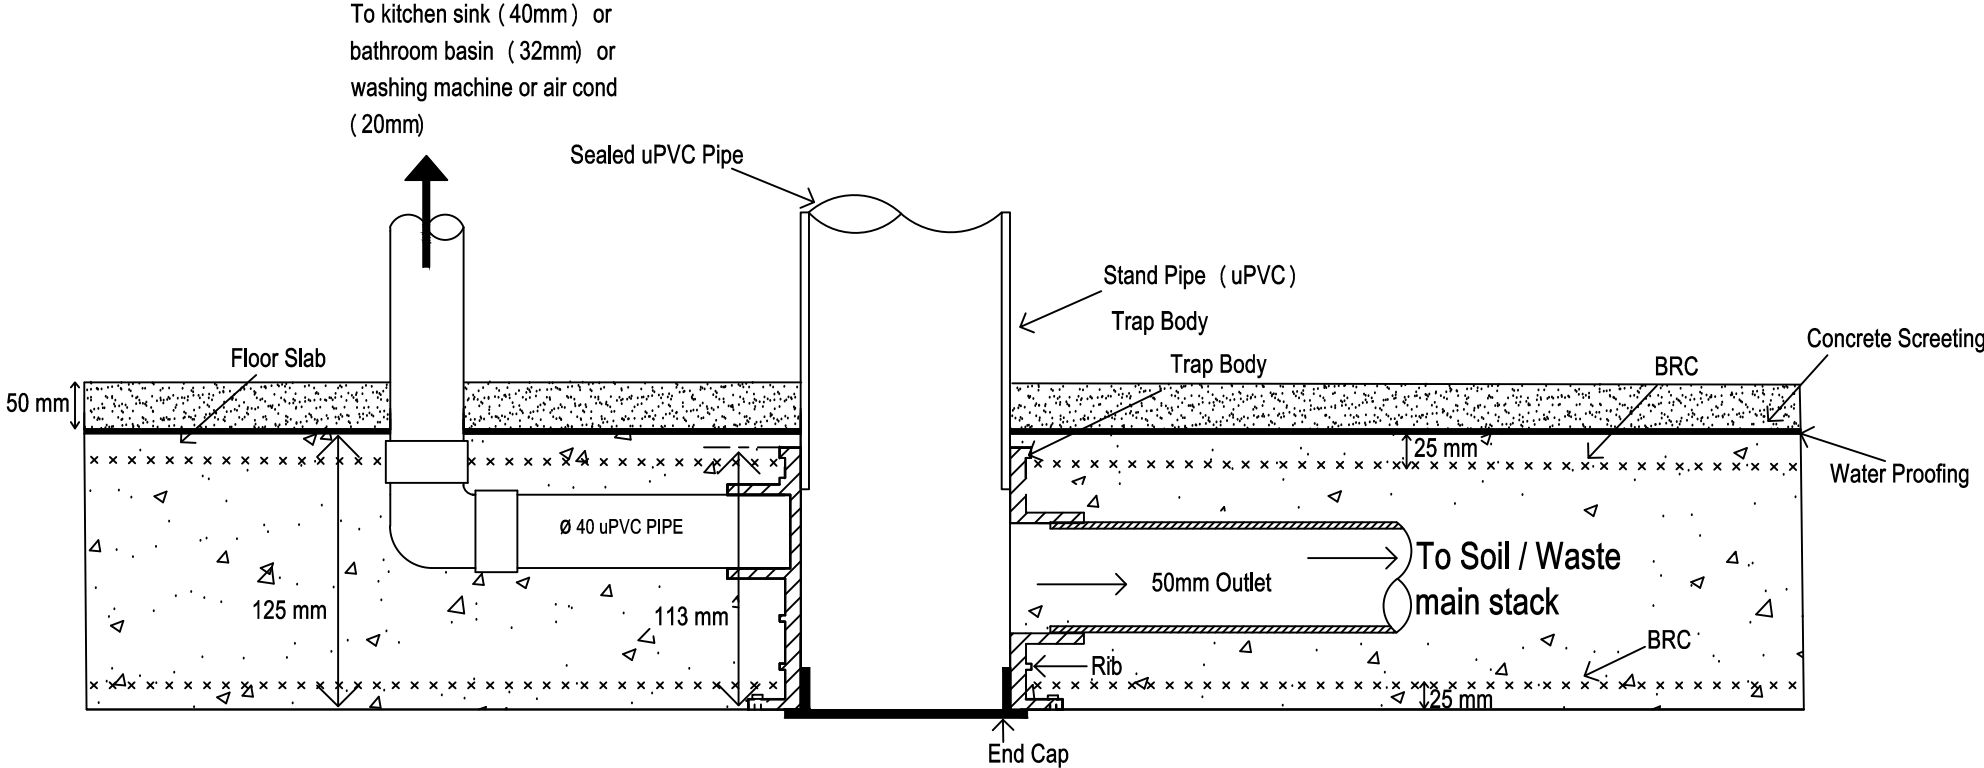

- a) Apply water proofing ( to required height)
- b) Screed to required height

## STEP 5

# FLOOR TILE, COLLAR, BOTTLE TRAP INSTALLATION AND COMPLETE FLOOR TRAP INSTALLATION

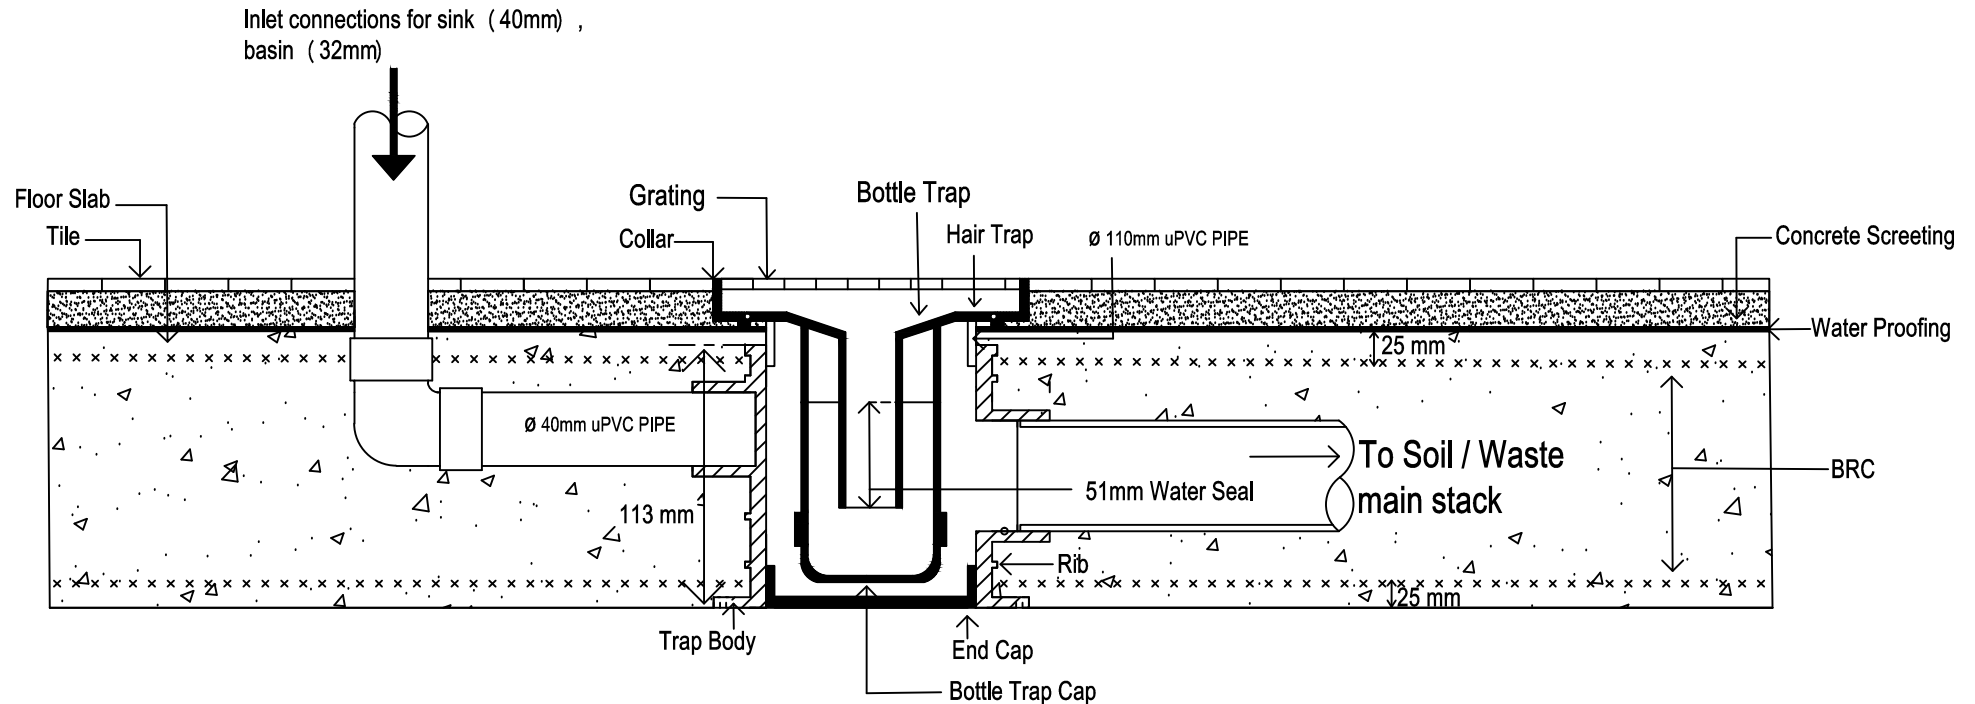

- Cut stand pipe (uPVC) to required height before tiling
- Place tiles, ensure that collar is flush with tiles.
- Place bottle trap in the body and finish job by placing grating.